


# Free Plans to Build a Joss & Main Inspired Claudia Sideboard

I love the simplicity of this piece. I built this one and am in the process of finishing it (I'll share photos later). It is easy and so cheap, too! I spent a little more than \$50 to complete this baby! It can be left au naturel or painted and stenciled with a cool design!



Joss & Main Inspired Claudia Sideboard

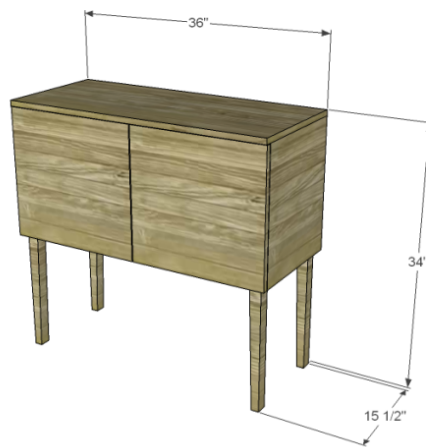

## Materials:

- 1-1/4" pocket hole screws

- 1-1/4" brad nails
- 2 sets of hinges
- One set of door pulls
- Finishing supplies

#### Lumber:

- 2 – 1x2 at 8'
- 2 – 2x2 at 8'
- One sheet of plywood


#### Cut List:

- 4 – 2x2 at 33-1/4" – Legs
- 4 – 1x2 at 11" – Side Frames
- 4 – 1x2 at 31-1/2" – Stretchers
- 1 – 3/4" plywood at 14" x 34-1/2" – Shelf
- 1 – 3/4" plywood at 17-1/4" x 34-1/2" – Back
- 2 – 3/4" plywood at 14-3/4" x 17-1/4" – Sides
- 1 – 3/4" plywood at 15-5/8" x 36" – Top
- 2 – 3/4" plywood at 17-1/8" x 17-15/16" – Doors


*Click on the drawings for a larger view!*

1. Cut the pieces for the legs. Cut the taper with a jigsaw (optional).



Cut the pieces for the side frames and drill pocket holes in each end. Orient the pocket holes in the upper pieces so they are facing up and facing down in the lower pieces. Assemble as shown using glue and 1-1/4" pocket hole screws.

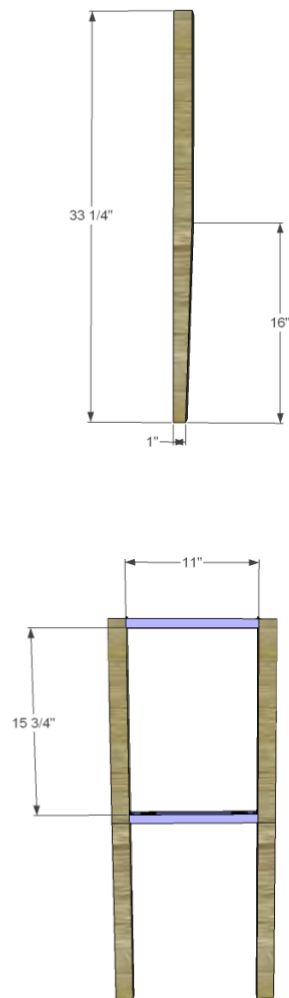


2. Cut the pieces for the stretchers and drill pocket holes in each end. Orient the pocket holes in the upper pieces so they are facing up and facing down into the lower pieces. Assemble as shown using glue and 1-1/4" pocket hole screws.

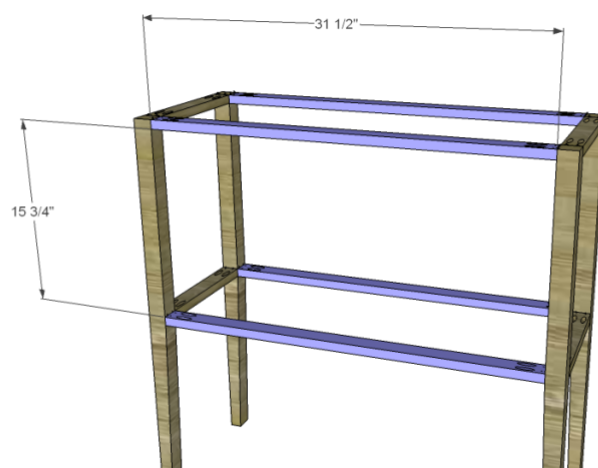


3. Cut the piece for the shelf and cut the notches with a jigsaw. Position the shelf on the lower stretchers and secure using glue and 1-1/4" brad nails.

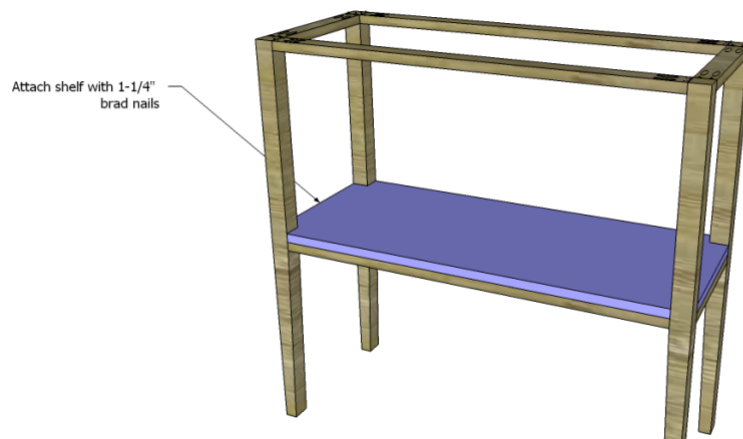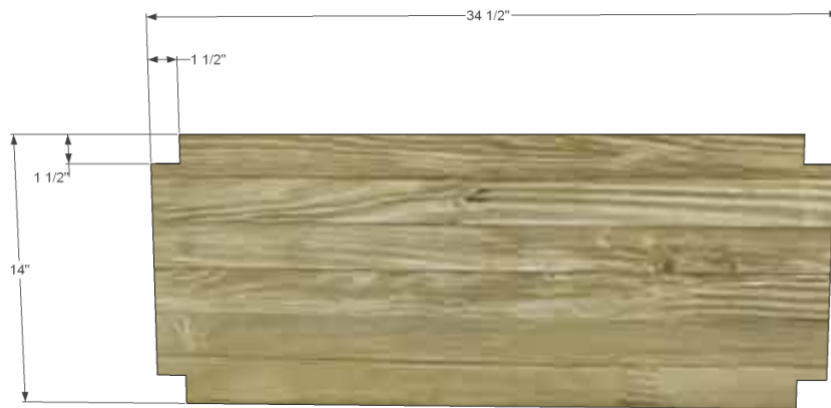

4. Cut the piece for the back. Position as shown and secure using glue and 1-1/4" brad nails.

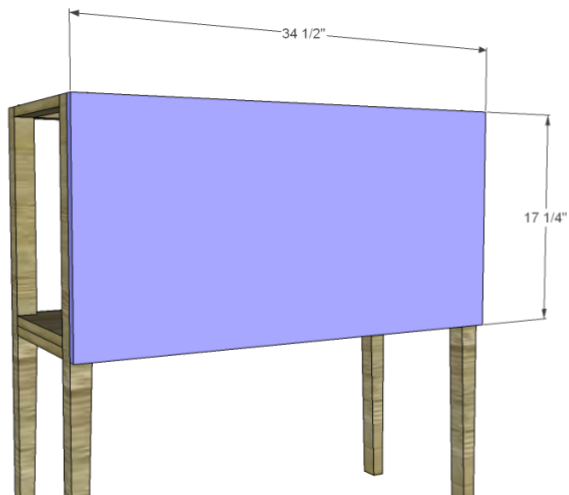


5. Cut the pieces for the sides. Position as shown and secure using glue and 1-1/4" brad nails.

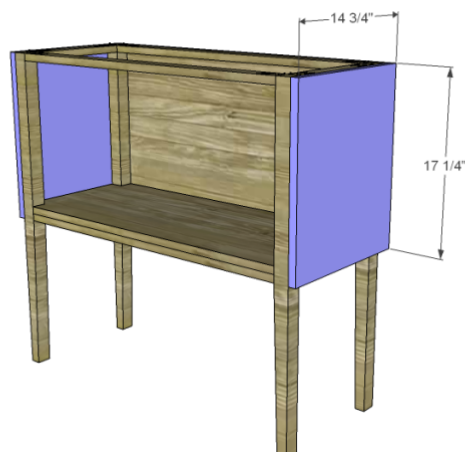

6. Cut the piece for the top. The back will be flush with the back and sides, and the front will overlap by approximately 7/8" to cover the doors and the gap created by the hinges. Secure using glue and 1-1/4" brad nails.



7. Cut the pieces for the doors. Install the hinges on the doors, then attach the hinges to the cabinet. There will be a 1/8" gap between each door as well as between the top and the upper part of the doors. Install the door pulls.

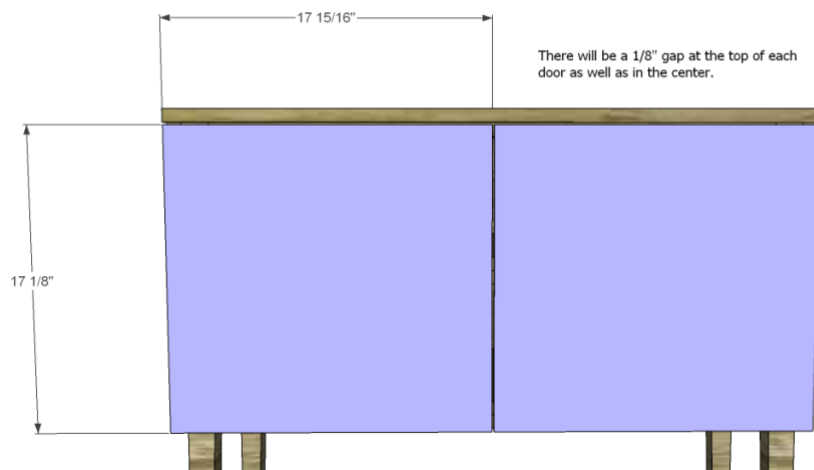

Finish as desired!

Share your fabulous work with me... Send photos to cher {at} designsbystudioc {dot} com or designsbystudioc {at} gmail {dot} com. I would love to feature your work on DbSC!

Until next time,

Happy Creating!